



# Somfy 24v RTS Receiver Programming


1 Place the RTS receiver into the programming mode

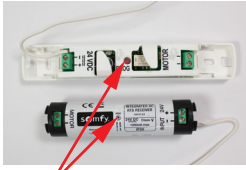


Press the program button for approximately 3 seconds until the Blind shuts once (moves a short distance in both directions & stops)

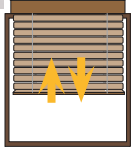


2 Recording the RTS controller:

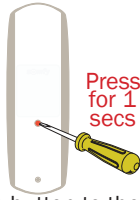

Press the button to the rear of the handset for approximately 1 second, the blind will shut once when the controller is recorded, (see notes below).

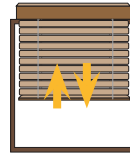


3 Erasing the memory of the RTS receiver:

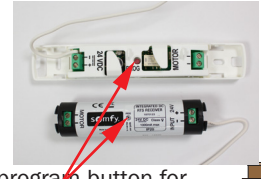

Press the program button for approximately 20 seconds, the Blind will shut 3 times and returns to factory settings.

Memory deleted

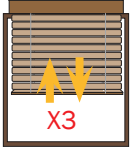


Notes: Tellis 1 TRS: 1 individual Blind or 1 group of 7 Blinds.  
 Telis 4 RTS: Up to 5 individual blinds or up to 4 groups of 7 Blinds or a combination of the above ( Max 28 Blinds).

When using a Multi-channel RTS control, remember to select the desired channel prior to programming.




## Setting the run time (Top Stack configuration shown)


1 Press the UP button to raise blind, if the blind move down, reverse the motor wires at the RTS unit.

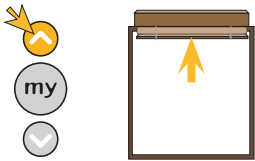


2 Press and hold the UP & DOWN buttons together for 3 seconds until the blind shuts once.

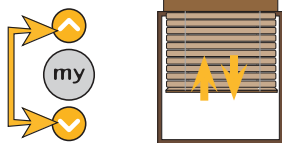


3 Press and hold the MY & DOWN buttons simultaneously for a maximum 0.5 seconds. The Blind will move down for 10 seconds. Use the MY button to stop the blind if less than 10 seconds travel is required (remember to allow for a 4 to 6 second overrun).

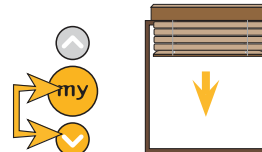


4 If the Blind has not reached its full travel, hold the DOWN button to initiate a further 10 seconds travel, repeat this process until the lower limit has been reached, (remember to allow for a 4 to 6 second overrun). Releasing the DOWN button at any time will stop the blind moving.

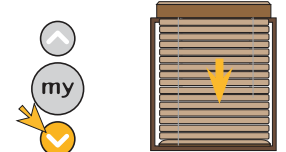


5 Press and release the MY & UP buttons simultaneously for a maximum of 0.5 seconds, the Blind will move up for 10 seconds.

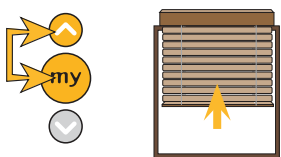


6 If the Blind has not reached its full travel, Hold the UP button to initiate a further 10 seconds travel, repeat this process until the upper limit has been reached (blind should stall automatically).

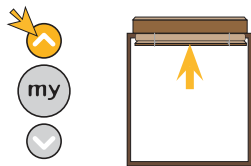


7 Press & hold the MY button for approximately 3 seconds until the blind shuts once.

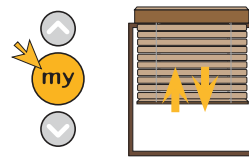


8 Press & hold the MY button for approximately 3 seconds until the blind shuts twice.

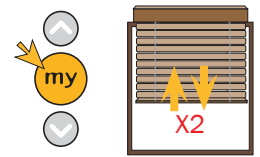


9 Press & hold all three buttons Simultaneously for approximately 3 seconds until the blind shuts once.

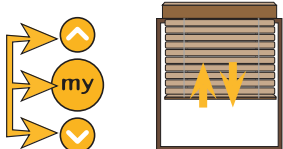

10 Press both MY & DOWN buttons Simultaneously for approximately 3 seconds until the blind shuts once.

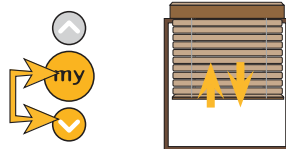

11 Press & hold the DOWN button for approximately 3 seconds Until the blind shuts once.

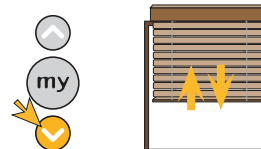

12 Press & hold the MY button for approximately 10 seconds until the blind shuts once.

